


# SYSTEM BLOCK DIAGRAM

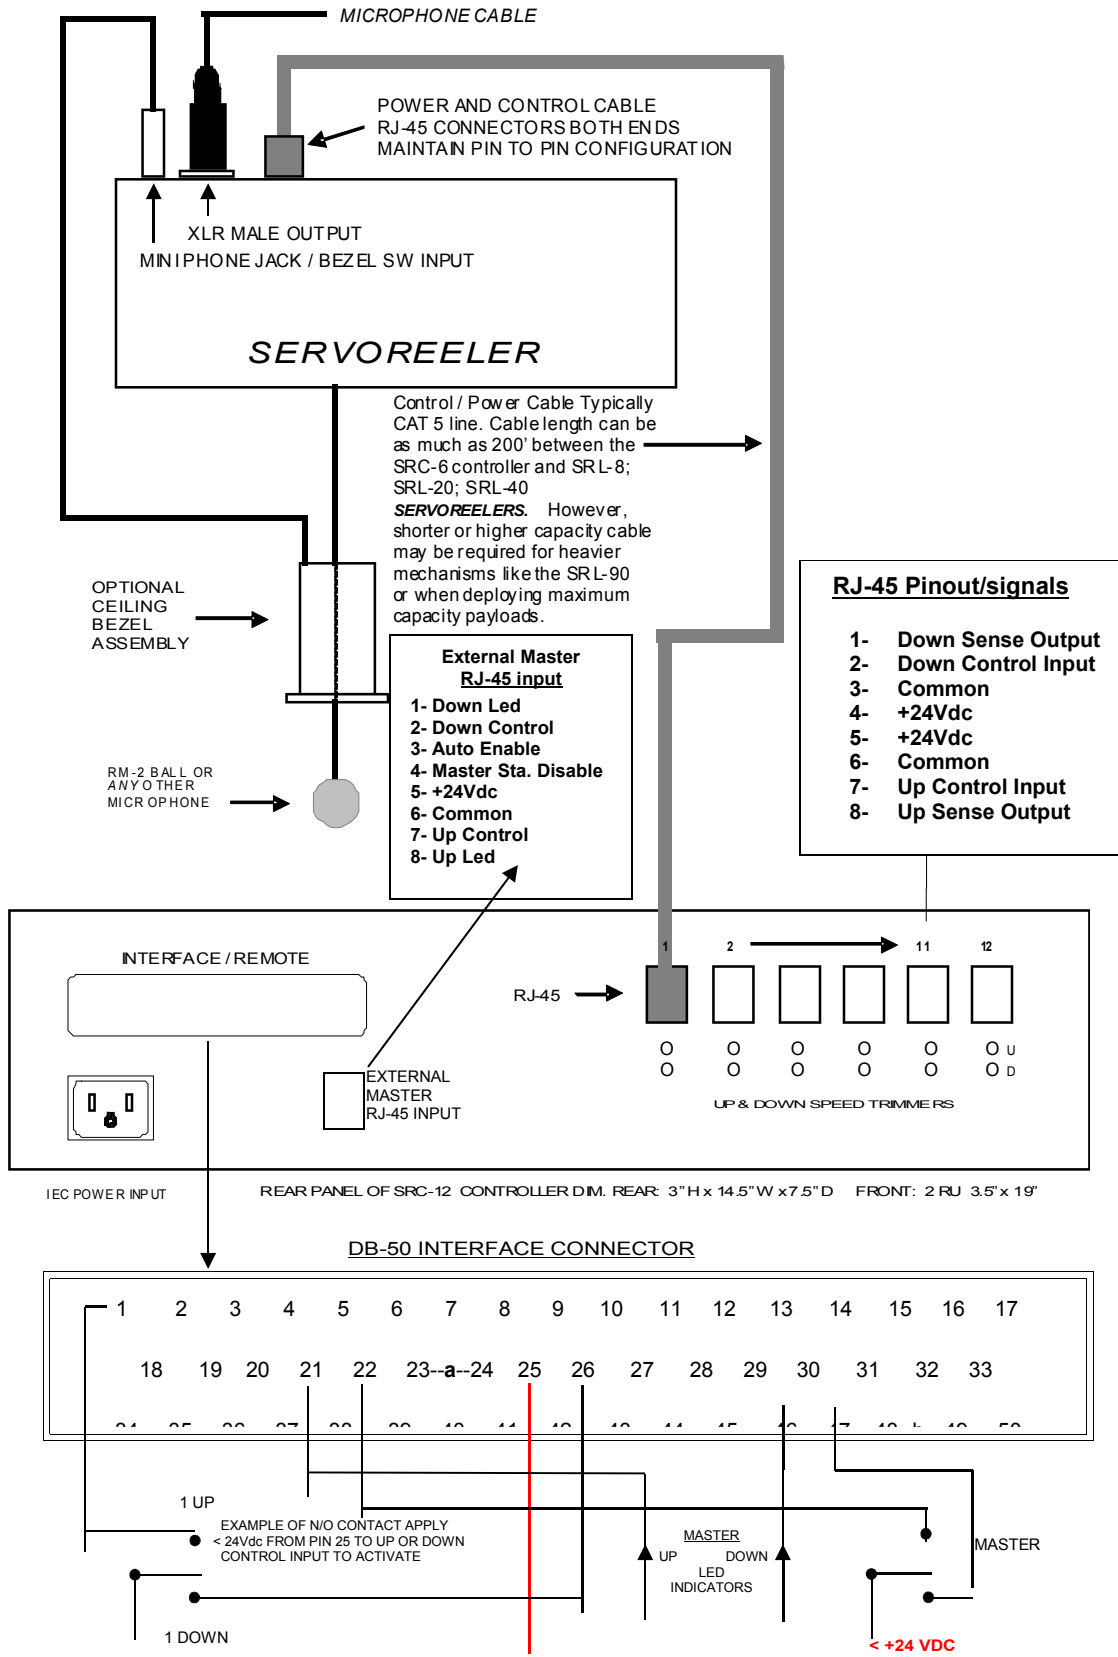

**NORMALLY OPEN CONTACT INTERFACE:** INDIVIDUAL INPUT CONTROL PINS: GROUP 1 – 12 UP & 26 – 37 DOWN  
**MASTER BUS:** DEPLOY (47) & RETRACT (22) APPLY MOMENTARY +24Vdc (25) TO ANY CONTROL INPUT TO ACTIVATE  
**JUMPERS:** (a) Auto mode enable. (b) Front panel master pushbutton station lockout: remove to enable with connector engaged.