


SYSTEM BLOCK DIAGRAM

SERVOREELER SYSTEMS

XEDIT Corporation
 218-31 Ninety Seventh Avenue
 Queens Village, New York 11429
 Web site: www.servoreelers.com
 E-mail: srsystems@servoreelers.com
 Tel: (718) 464-9400 Fax: 464-9435

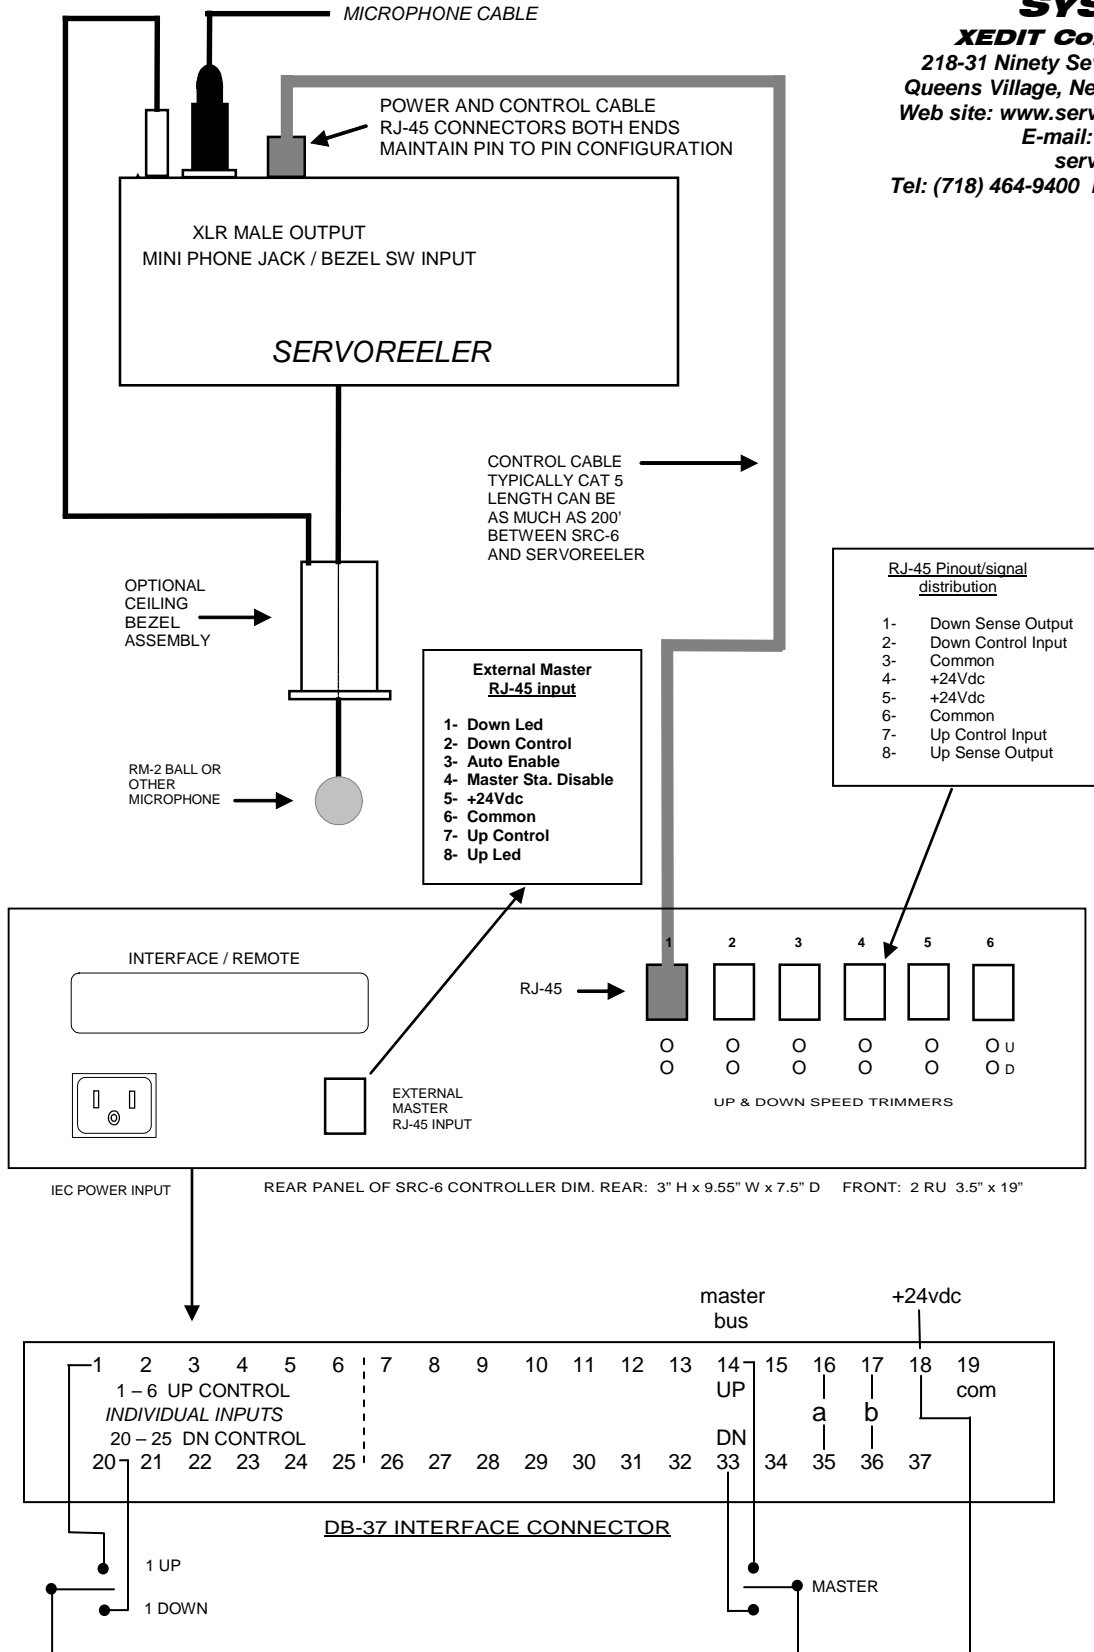

NORMALLY OPEN CONTACT INTERFACE: INDIVIDUAL INPUT CONTROL PINS: GROUP 1 - 6 UP & 20 - 25 DOWN
MASTER BUS: DEPLOY (33) & RETRACT (14) APPLY MOMENTARY +24Vdc (18) TO ANY CONTROL INPUT TO ACTIVATE external master bus to an external computer system. For this application, use 24Vdc from RJ-45 pin (5) and apply through normally open contact to pin (2) to "Deploy" and pin (7) to "Retract" entire system. To disable the front panel control station, connect pin (4) to common. To enable Auto lock-in operation connect pin (3) to +24Vdc. **When using the RJ-45 Master input, remove the DB-37.**
JUMPERS: (a) Front panel master lockout: remove to enable with connector engaged. (b) (Auto) lock-in mode-enable.