

**SERVOREELER
SYSTEMS**

XEDIT Corporation

218-31 Ninety Seventh Avenue


Queens Village, New York 11429

Web site: www.servoreelers.com

e-mail: srsystems@servoreelers.com

Tel: (718) 464-9400 Fax: 464-9435

INSTALLING DESK RECEPTACLE

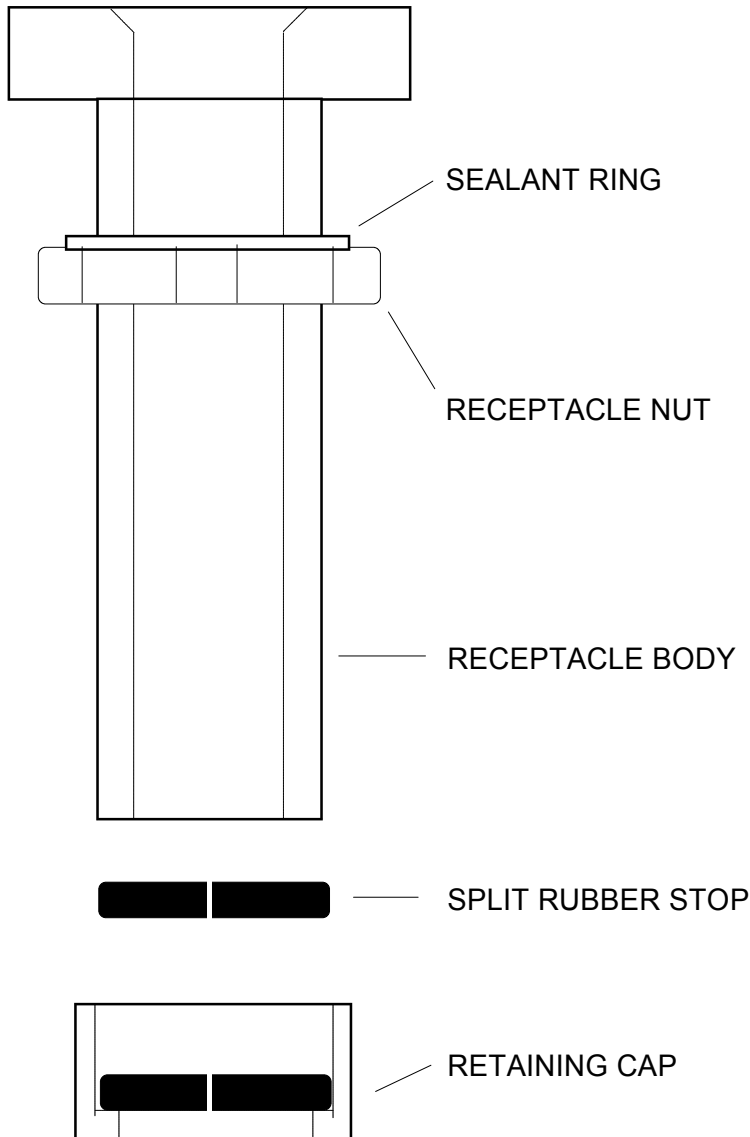

INSTRUCTIONS:

- 1- Secure the receptacle into the desk opening by tightening the receptacle nut with a one and five sixteenths 1.312" open end wrench. Only exert enough force to slightly collapse the sealant ring on the nut. Excessive force may damage the Delrin body.
- 2- Leaving the windscreen off the microphone; first slide the retaining cap in the orientation shown above then slip the rubber stop onto the microphone cable using the split in the rubber stop.
- 3- Seat the rubber stop into the bottom of the retaining cap. Slip the microphone into the bottom of the receptacle and hand tighten the screw cap in place thereby retaining the microphone into the receptacle.
- 4- Pull the microphone out of the receptacle and snap the windscreen over the capsule.
- 5- NOTE: When removing the microphone for service, unsnap windscreen before trying to slide the microphone out of the receptacle; reversing the above procedure.

